



AXA

Digital door spy DDS 2



Information

You have just acquired a high quality AXA product. The instructions below must be followed closely in order to effectively assemble and operate this product.

Assembly tools (recommended):

Tape measure, (battery) drill or screw machine, Ø 14 mm drill bit, pencil or awl.

Assembly place

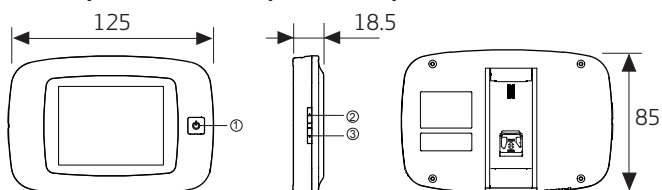
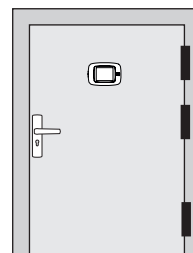


Use


Outside doors (door thickness 38 - 110 mm)

Package contents

- | | |
|---------------------------------|---------------------------------|
| 1. (1x) Digital door spy | 6. (1x) Door bell |
| 2. (1x) M3 x 8 mm bolt | 7. (1x) Camera |
| 3. (1x) Empty battery indicator | 8. (1x) Camera connecting cable |
| 4. (4x) AAA Batteries | 9. (3x) Mounting sleeve |
| 5. (1x) Mounting plate | 10. (1x) Mounting key |

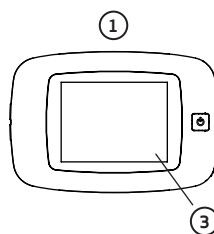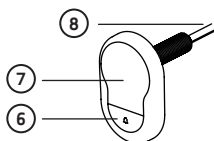

Placing the batteries

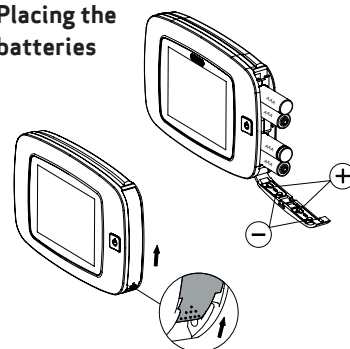

User manual

No.	Operating key	Functions
1	On/Off key	- After installing the batteries, keep the key pressed to turn the appliance on
2	Up	- in the main menu, press the key to go to the photo menu - in the photo menu, press the key to scroll up - in the photo menu, keep the key pressed to remove the photo - in the main menu, keep the key pressed to go to the settings menu - in the settings menu, press the key to choose the setting
3	Down	- in the photo menu, press the key to scroll down - in the settings menu, press the key to adjust the setting - Confirm removal

Operation - Settings

- In the main menu, keep the ▲ key pressed to go to the settings.
- Press the ▲ key to go to other settings:
Time - Date - Ring tone - Volume - Automatically deactivate time - Save file in
- Press the ▼ key to adjust the setting:
- Setting TIME/DATE: press the ▼ key to increase the current number. Keep the key pressed to accelerate adjustment
- When the adjustment has been made, it is automatically saved and the settings menu is closed after a couple of seconds.
- Keep the ▲ key pressed to leave the settings menu.

Set the time



18:00

2012-7-30

Set the date

Set the ring tone



Set the volume 0:
quiet
3: max. volume

Set automatic
deactivation



Save file
* locally
* TF memory card



AXA

Digital door spy DDS 2

Operation – Use of camera

Visitors / view camera image

- In the main menu, press the On/Off key to activate the camera.
- The ring tone sounds when the door bell is pressed. The screen turns on automatically and shows the camera image. A photo of the camera image is also saved. The image turns off again when the set time has lapsed.
- In the main menu, press the ▼ key to save a photo of the camera image.

Viewing and removing photos

- In the main menu, press the ▲ key to view the photos.
- Press the ▲ or ▼ key to scroll through the photos.
- Keep the ▲ key pressed to remove the photo.
- Confirm removal of the photo with the ▼ key.

Automatic saving of photos

- Photos can be saved to the appliance (standard) or to a TF memory card.

Memory card installation

- A TF memory card is not included. This must be purchased by the user.
- Install the TF memory card before placing the batteries.
- To install the TF memory card, slide the metal memory card holder towards the "Open" symbol.
- Pop the metal memory card holder up and place the TF memory card in the holder.
- Pop the memory card holder back and slide the holder towards the "Closed" symbol.
- Max. 8GB TF memory cards can be used. Higher than HSC Class 6 is recommended.

Assembly manual

For problem-free operation of this product you must follow the instructions below carefully.

Assembly

- 1 Place the batteries (4) in the door spy.
- 2 Replace the existing door spy or drill a hole (Ø 14 mm) at eye level. Remove the foil from the double-sided camera tape (7) and insert the camera through the door from the outside. Ensure that the bell head (6) points straight down (figure A).







Do not fold or pull on the camera connecting cable

- 3 Disassemble the mounting plate (5) at the bottom of the screen (1) by unscrewing (2) the bolt (figure B).
- 4 Remove the foil of the double-sided tape on the back of the mounting plate (figure B).
- 5 Insert the camera connecting cable (8) through the mounting plate and stick the mounting plate with the arrow pointing upwards, to the inside of the door. Screw the mounting sleeve (9) onto the camera thread using the mounting key (10) (figure C).



The arrow on the mounting plate must point upwards

- 6 Carefully connect the camera plug to the back of the screen.
- 7 Hook the screen over the top of the mounting plate and secure the unit using the bolt (figure D).
- 8 The AXA Digital door spy is ready for use.

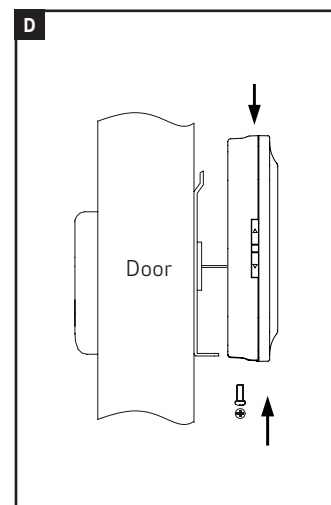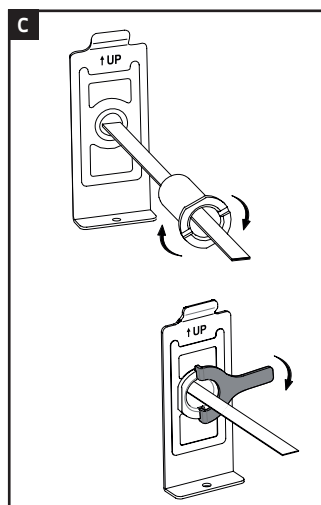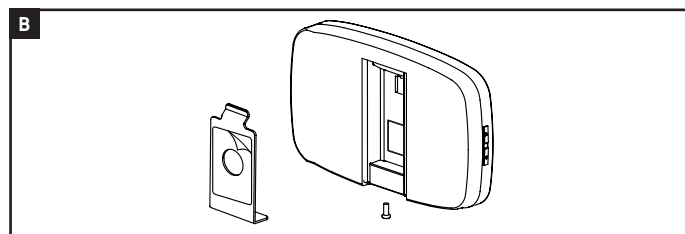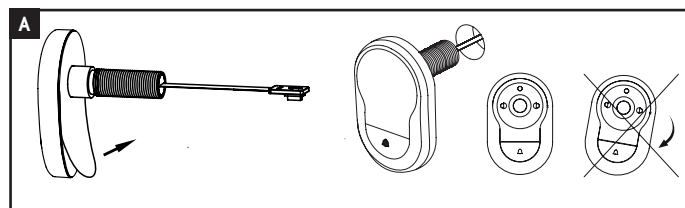

Specifications

Door thickness:	38-110 mm
Camera hole size:	Ø14 -22 mm
LCD screen:	3.2 inch TFT
Resolution:	QVGA (320x240)
Dimensions (wxhxd):	125 x 85 x 18,5 mm

Internal memory:	About 50 photos (depending on surroundings)
Sensor:	0.3 Mega Pixels CMOS
Memory card:	Micro SD (TF), max. 8GB
Power:	4x AAA batteries
Weight:	260 grams